

Features:

Ring Volume



- A staff member can adjust the ring volume on a phone.
- To change the ring volume, follow these steps:
 - Press the Volume button on the phone to the desired ring volume.
 - Press the Services button on the phone.
 - Press the Save Soft Key button on the phone.
- This will change the ring volume for all future calls.